


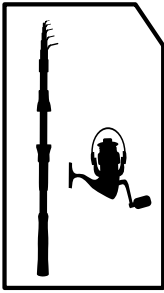


TELESCOPIC FISHING ROD

TO ASSEMBLE:


- › Remove both the rod and reel from the packaging.



- › Tighten both knurled rod nuts once the reel foot is inserted into both the top and bottom collars so that the reel locks into the rod seat.

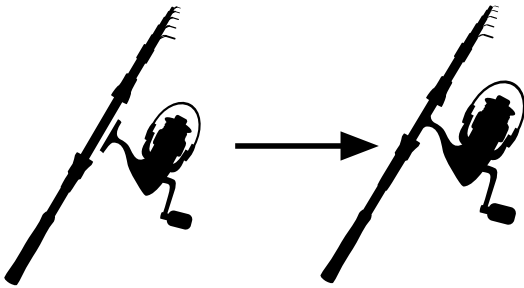


- › Loosen the 2 knurled nuts on the bottom of the rod. This will allow the reel collars to slide down so that the reel foot can fit into the rod seat.

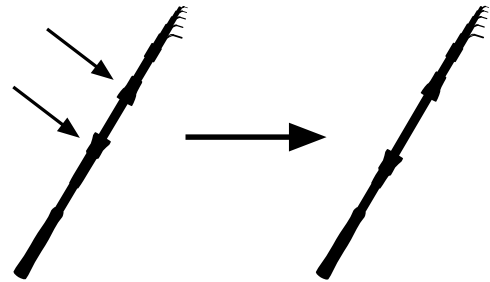

TO INSTALL LINE:

- › Fully extend the rod and run the line from the spool through the first guide on the rod once the reel is attached securely to the rod.

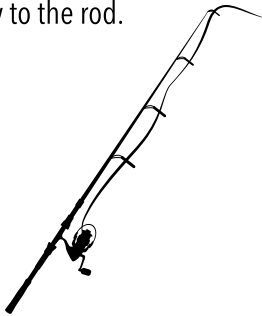

- › Slowly start winding line onto the reel by turning the reel handle as if you were reeling in after a cast. Watch your spool orientation and make sure the line isn't too tight or twisted.



- › Attach the line to the reel spool by wrapping the line two times around the reel spool and then secure it with an overhand knot. Trim the tag end close to the knot.



- › Crank the reel until the spool is full and cut line.

